


Fig. 1a

Scoreboard, Remotes, and Switch Panel			
DRAWN	PHILW	SIZE	FIG. NO.
ISSUED		SCALE	N/A
		DWG NO.	REV
			A
		SHEET	2 OF 9

Copyright © 1999 Philips North America Consumer Electronics Co.

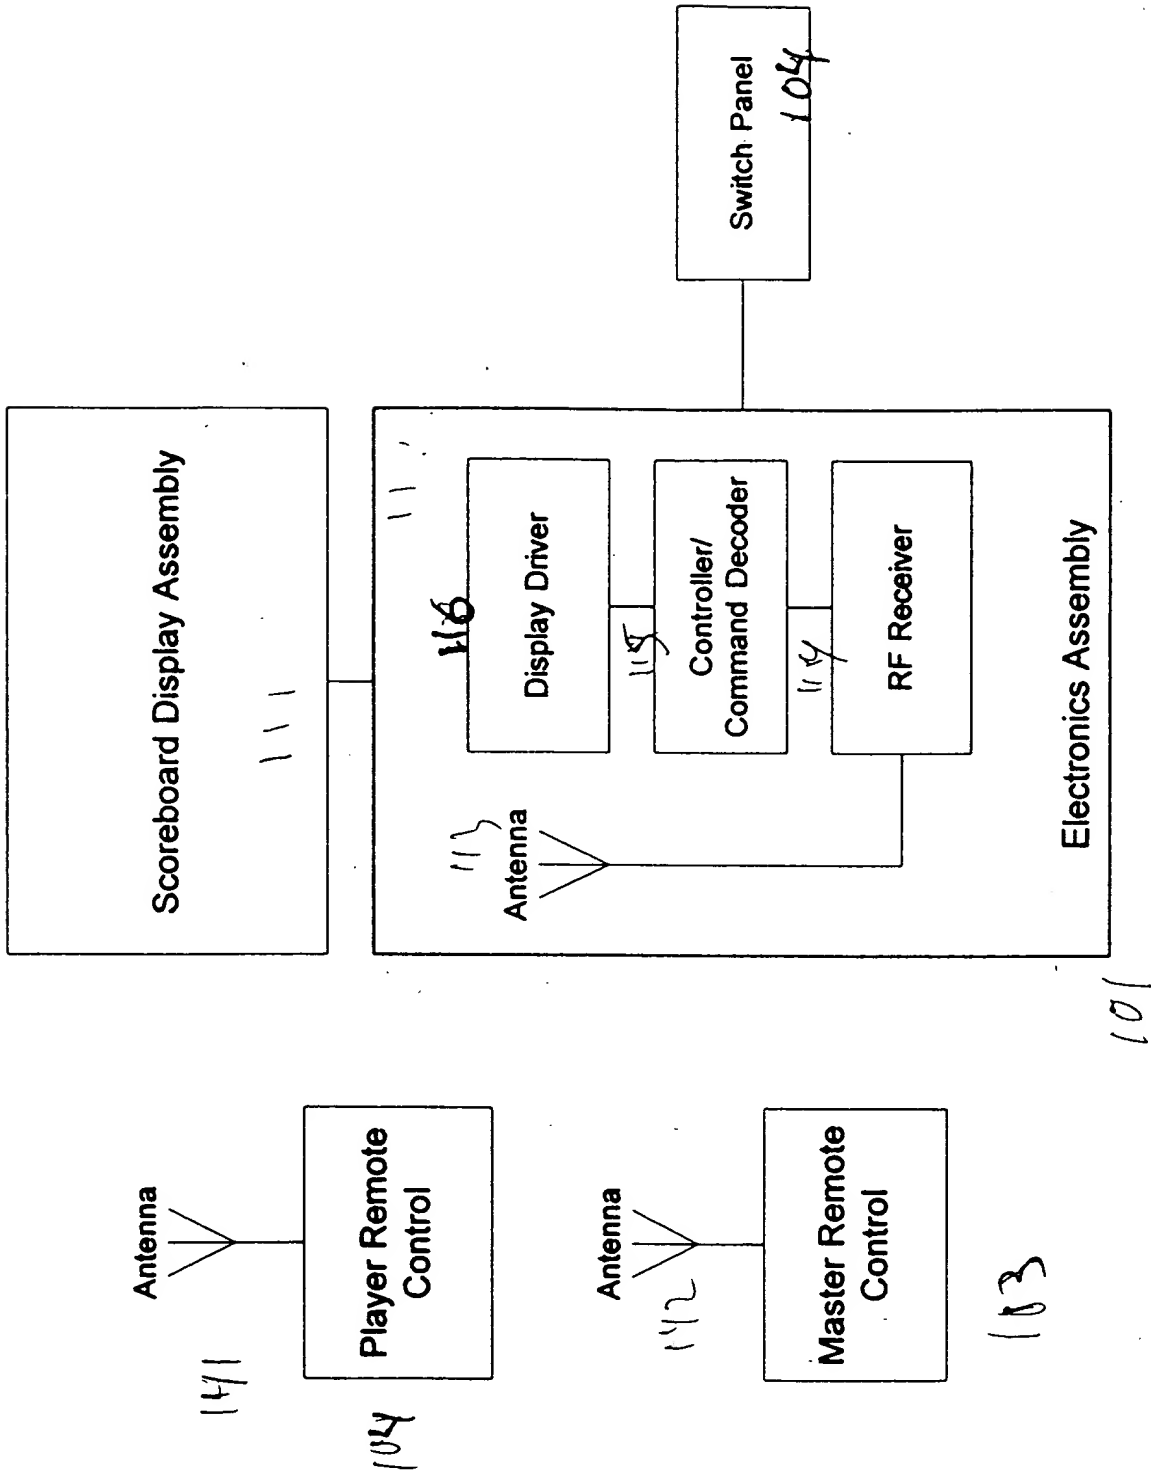


Scoreboard System Components			
SCOREBOARD	PHILW	SIZE	FORM NO
ISSUED		SCALE	N/A

REV	DWG NO	SHEET	3 OF 9
A			

Fig 16

200

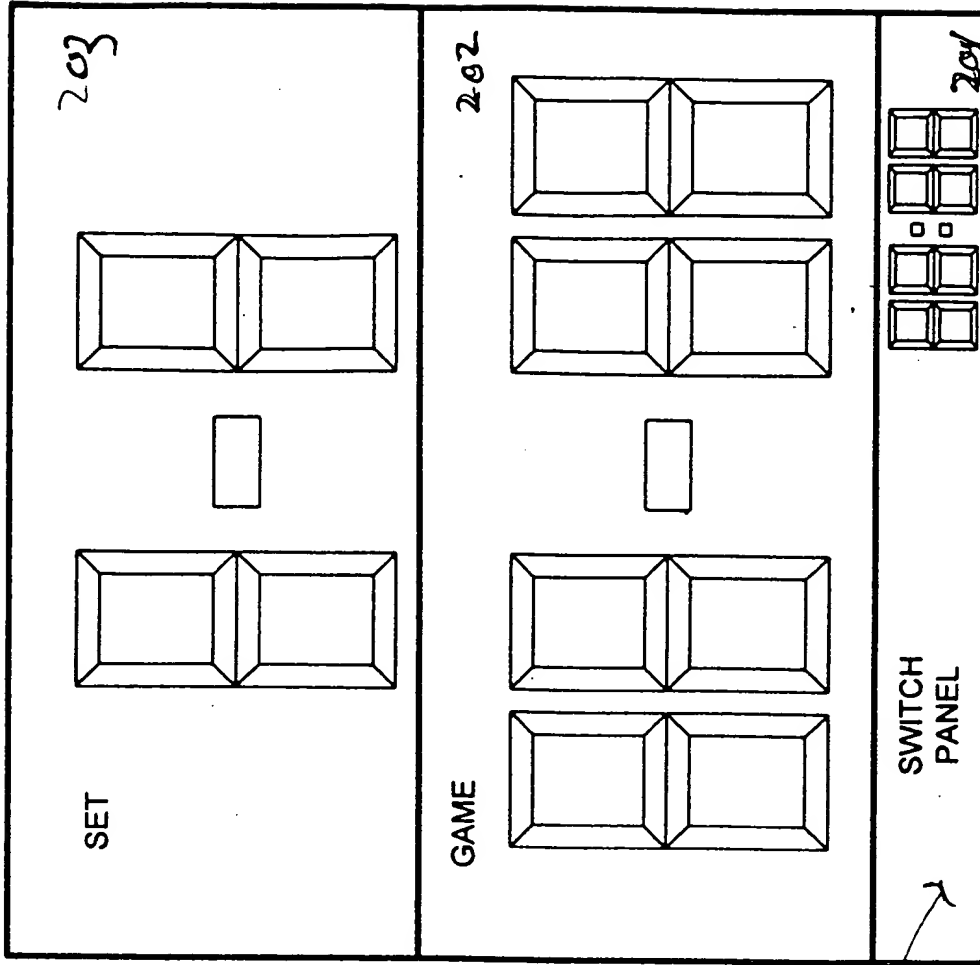

SWITCH PANEL DETAIL		
SWITCH	POSITIONS	
Match Mode	3	5
Set Mode	6	8
Tie Breaker Mode	ON	OFF
Timer	ON	OFF
Power	ON	OFF


204

Fig 2a

Tournament Scoreboard Display Assembly		SIZE	FSCM NO	DWG NO	REV
DRAWN	PHILW				A
ISSUED		SCALE	N/A	SHEET	5 OF 9

DATE: 3/20/2020

2/0

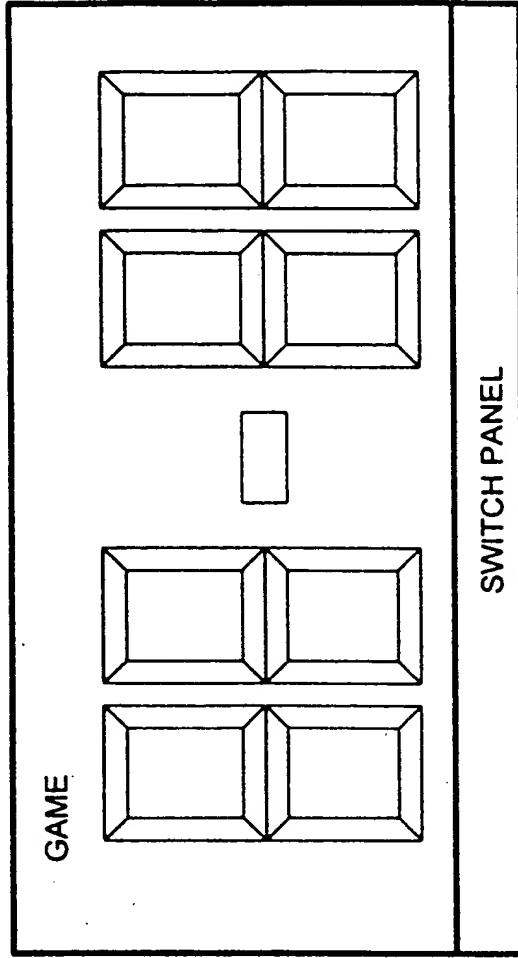

SWITCH PANEL DETAIL		
SWITCH	POSITIONS	
Power	ON	OFF

2/2


2/1

Personal Scoreboard Display Assembly		
DRAWN	PHILW	
ISSUED		

SIZE	FSCM NO	DWG NO	REV
			A
SCALE	N/A	SHEET	6 OF 9

2/2
2/1
2/2

1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 12. 13. 14. 15. 16. 17. 18. 19. 20. 21. 22. 23. 24. 25. 26. 27. 28. 29. 30. 31. 32. 33. 34. 35. 36. 37. 38. 39. 40. 41. 42. 43. 44. 45. 46. 47. 48. 49. 50. 51. 52. 53. 54. 55. 56. 57. 58. 59. 60. 61. 62. 63. 64. 65. 66. 67. 68. 69. 70. 71. 72. 73. 74. 75. 76. 77. 78. 79. 80. 81. 82. 83. 84. 85. 86. 87. 88. 89. 90. 91. 92. 93. 94. 95. 96. 97. 98. 99. 100.

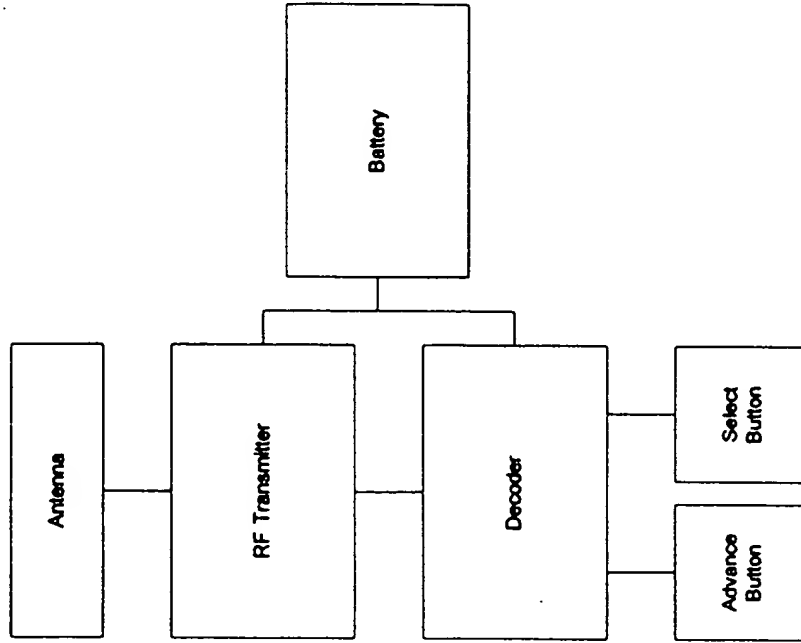

| BUTTON | HOW THE BUTTON IS USED |
|---------|---|
| Select | Select a Scoreboard element to change |
| Advance | Increment the selected scoreboard element |

Fig 3a

| | | | | | |
|-----------------------|-------|-------|---------|--------|--------|
| Player Remote Control | | SIZE | FSCM NO | DWG NO | REV |
| DRAWN | PHILW | | | | A |
| ISSUED | | SCALE | N/A | SHEET | 7 OF 9 |



47

| | | | |
|----------------------|--------|-------|--|
| Electronics Assembly | DRAWN | PHILW | |
| | ISSUED | | |

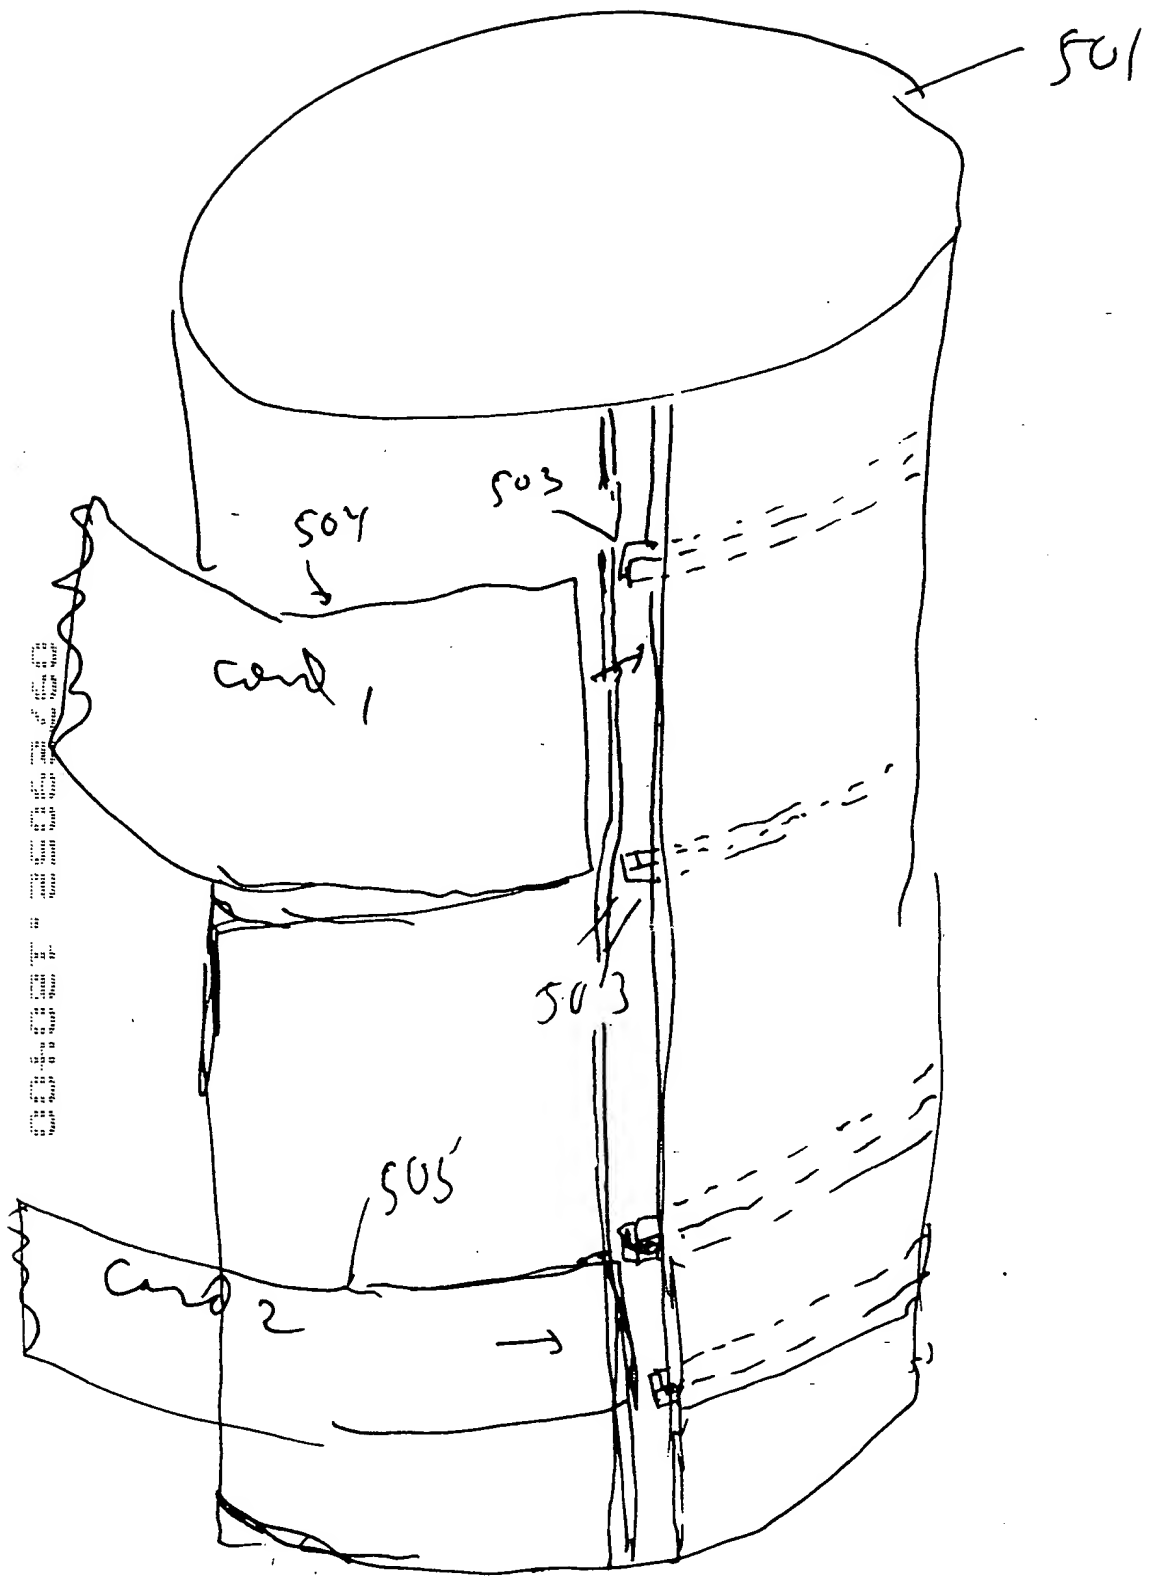


Fig 5a

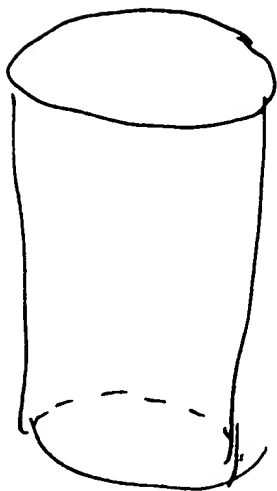


Fig 6a



Fig 6b

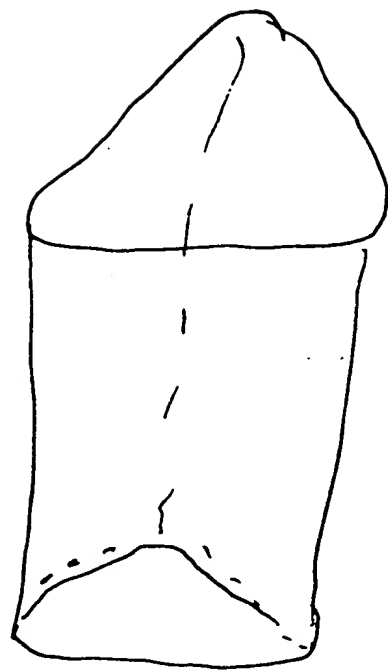


Fig 6c



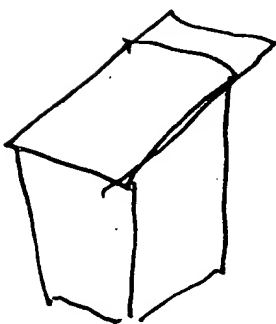


Fig. 6d

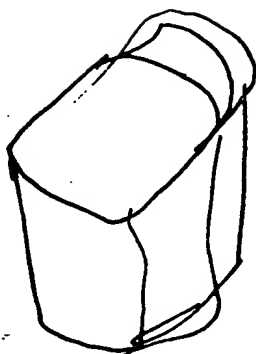

6e

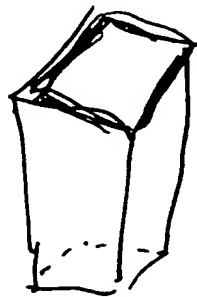

6f



6g